## Keypad use




collectionassisto.com

### **Closing the drain**


This screen indicates that the door is in the right position, waiting for the user to act.

To obtain the desired temperature and avoid the risk of burning, activate the interface with the touch of a button and adjust the water temperature. Slide the handle towards the backrest to unlock the door. Pull the handle to raise or lower the door to the desired height.

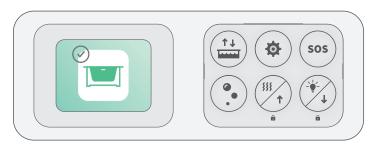

#### To close the drain and fill the bathtub.


1. Once the door is raised, hold the fill/drain button down for 3 seconds to seal the door.

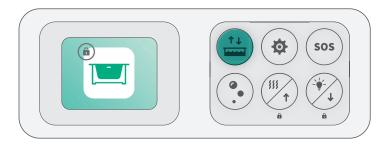

2. Fill the tub with water to the desired height and temperature.




3. During the bath, this screen displays time and water temperature.

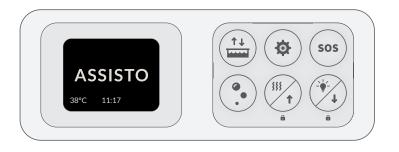



### **Opening the drain**

This screen is in standby mode until further action is taken during the bath: the time and water temperature are shown and can be changed using the menu.

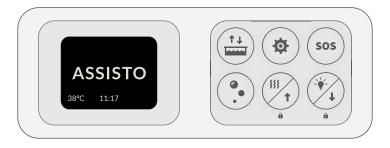


#### To open the drain and empty the bathtub.


1. When finished, press and hold the fill/drain button for 3 seconds.



- 3. A 5-second timer will appear, after which the door will unseal. Slide the handle towards the backrest to unlock the door, then press to lower the door.
- Image: Constraint of the second se
- 5. When the display alternates between these two images, the water supply from the faucet is temporarily cut off because there is too much water in the tank.

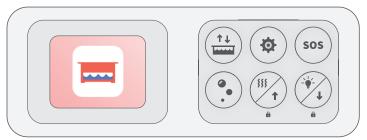


After-sales service 1-844-4NO-STEP | 1-844-466-7837 sav@collectionassisto.com 2. The bathtub will drain.

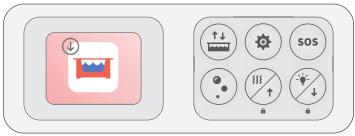

4. The massage system button flashes to indicate that the air jets are purging.



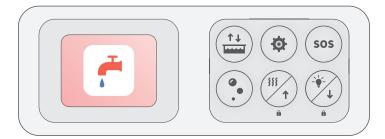



### Massage system

This screen is waiting for an action to be taken during bathing. The time and water temperature are displayed and can be changed by using the menu.


The massage system can be activated only in bathing mode.

### To activate the different speeds or the different cycles of the blower.


1. Press the massage system button once to activate the air jets in Speed 1 (minimum).



3. Press the massage system button a third time to activate the air jets in Speed 3 (maximum).

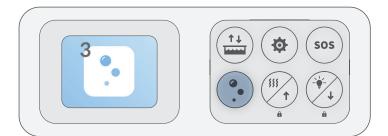


5. Press the massage system button a fifth time to activate the air jets in Sequential mode.

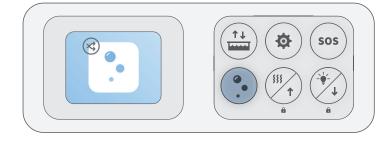

After-sales service 1-844-4NO-STEP | 1-844-466-7837 sav@collectionassisto.com




2. Press the massage system button a second time to activate the air jets in Speed 2.

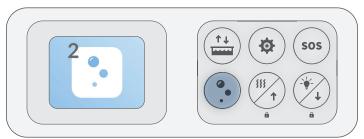

4. Press the massage system button a fourth time to activate the air jets in Wave mode.




6. Press the massage system button a sixth time to deactivate the air jet system.

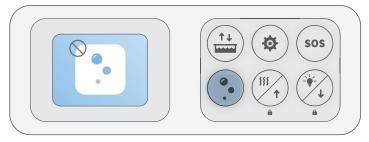




### Heated backrest system

This screen is waiting for an action to be taken during bathing. The time and water temperature are displayed and can be changed by using the menu.

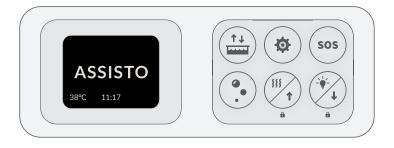


### To activate the different intensities of the heated backrest.

- 1. Press the heated backrest button once to activate the heated backrest at maximum power.
- 2. Press the heated backrest button a second time to reduce the power to 50%.

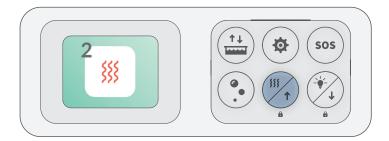

3. Press the heated backrest button a third time to deactivate the heated backrest.




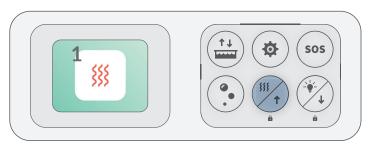




### **Chromatherapy system**

This screen is waiting for an action to be taken during bathing. The time and water temperature are displayed and can be changed by using the menu.

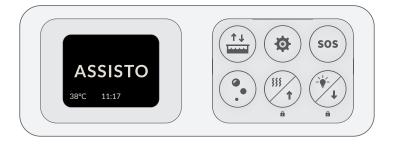


#### Activating the different light colours.


1. Press the chromatherapy button once to activate the White light.

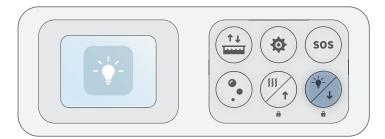

3. Press the chromatherapy button a third time to stop the Rainbow mode on the displayed colour.

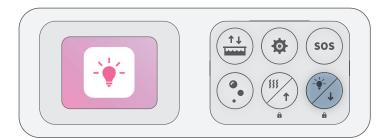


5. Press the chromatherapy button a fifth time to activate the Blue colour.

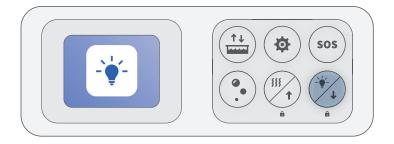


2. Press the chromatherapy button a second time to activate the Rainbow mode.



4. Press the chromatherapy button a fourth time to activate the Aqua colour.

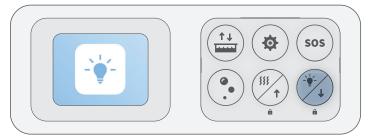


6. Press the chromatherapy button a sixth time to activate the Magenta colour.

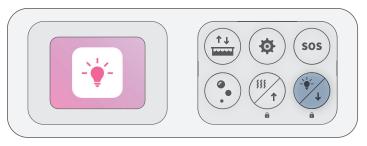




After-sales service 1-844-4NO-STEP | 1-844-466-7837 sav@collectionassisto.com 7. Press the chromatherapy button a seventh time to activate the Red colour.

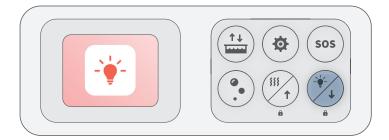

9. Press the chromatherapy button a ninth time to activate the Yellow colour.




- 11. Press the chromatherapy button an eleventh time to turn off the light.
- \* At any time, press and hold the chromatherapy button for 1 second to turn off the light.

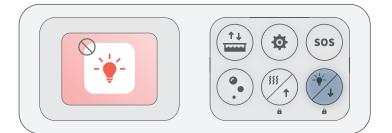

8. Press the chromatherapy button an eighth time to activate the Orange colour.



10. Press the chromatherapy button a tenth time to activate the Green colour.

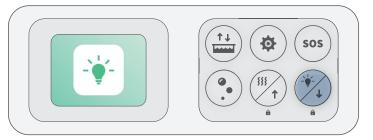




### Temperature and language setting

The button representing a gear shows the menu and becomes **the selection button** when the menu is open.

The arrows are used to **navigate the menu**.

The item selected on the screen appears in blue.

The menu is only accessible when the tub is not sealed.

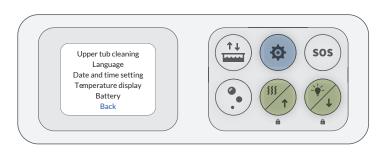


#### To set the temperature unit of measurement


- 1. Press the up arrow twice.\*
- \* The menu layout is the same in both languages.



3. Press the arrows to make your choice between Fahrenheit or Celsius and press the select button.

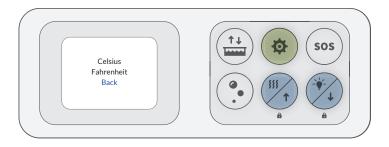

2. Press the selection button to select "Language."

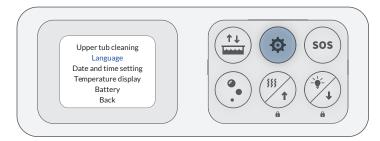


#### After-sales service

1-844-4NO-STEP | 1-844-466-7837 sav@collectionassisto.com 2. Press the selection button to select "Temperature display."




#### To set the language

1. Press the up arrow four times.

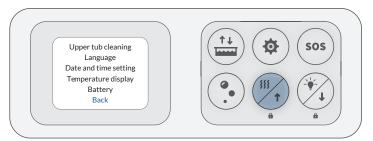

 Press the arrows to make your choice between French or English and press the selection button.

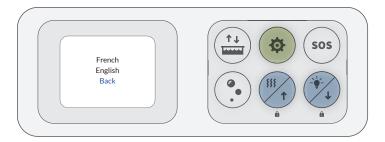



### Date and time setting


The button representing a gear shows the menu and becomes **the selection button** when the menu is open.

The arrows are used to **navigate the menu**.

The item selected on the screen appears in blue.

The menu is only accessible when the tub **is not sealed**.

1. Press the up arrow three times.

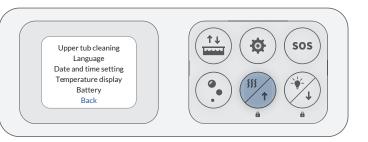


2. Press the selection button to choose "Date & time setting."

Upper tub cleaning

Language Date and time setting

Temperature display Battery

Back

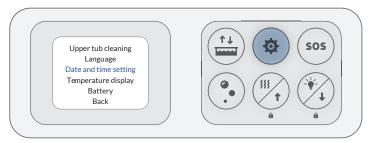

ΥJ

0

SOS

3. Press the up arrow twice.

4. Press the selection button to choose "Date."



5. Using the arrows, find the current year and press the select button.





1-844-4NO-STEP | 1-844-466-7837 sav@collectionassisto.com




6. Using the arrows, find the current month and press the select button.





7. Using the arrows, find the current day and press the select button.

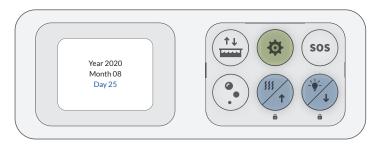


9. Press the selection button to choose "Time."

8. Press the up arrow once.



10. Using the arrows, choose the time and press the select button.

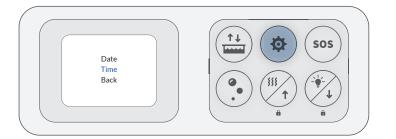


11. Using the arrows, choose the minutes and press the select button.






12. Press the selection button to return to the main menu.

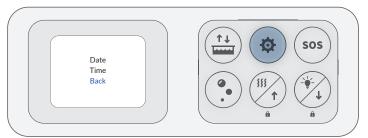




### In case of emergency

This screen is waiting for an action to be taken during bathing. The time and water temperature are displayed and can be changed by using the menu.

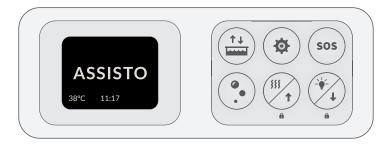

#### In the event of an emergency or system failure.

1. Press and hold the SOS button for 3 seconds.

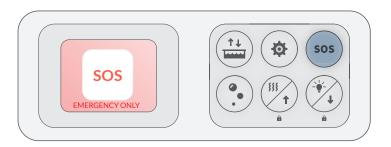

- 2. The SOS button allows for the immediate deflation of the seal and drainage of water. \*
- \* Risk of water damage, use in emergencies only.






### Panel reset control

This screen indicates an error code.


Series 1XX error codes require user action.

The 2XX series error codes require preventative action.

Lastly, 3XX serial codes require significant action. In the event of a 3XX error, contact our after-sales service.

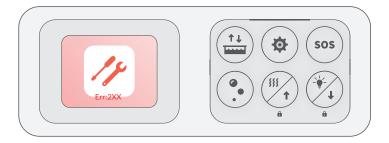

1. To clear the error code, press and hold the menu button for 10 seconds.

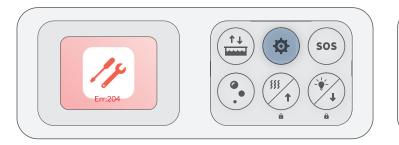

2. The error code should be gone. At the end of the next use of the tub, the message will reappear if maintenance has not been performed.






# Confirmation of battery replacement

The button representing a gear shows the menu and becomes **the selection button** when the menu is open.

The arrows are used to **navigate the menu**.

The item selected on the screen appears in blue.

The menu is only accessible when the tub **is not sealed**.

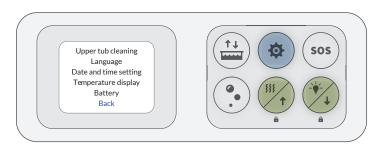


#### Do not forget to reset the counter after you change the batteries or after a power failure has occurred while the bath was in operation.


1. Press the up arrow once.



3. Press the up arrow once and press the select button.

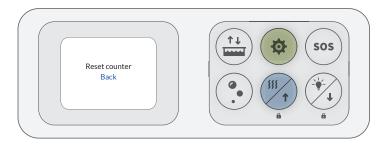


2. Press the selection button to choose "Batteries."

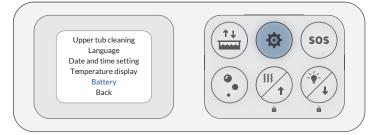



### In the event of a power failure


When a failure occurs, this image is displayed for 1 minute (unless the power is restored before). If the massage system and the heated backrest are on, they will turn off. Chromatherapy can be used.

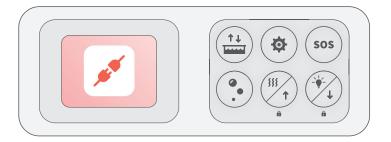

- If the power is not restored, a 90-second countdown will appear indicating that the bath water will drain automatically. This count is displayed to allow the user to see how much time they have to rinse before draining.\*
- \* At any time, the user can decide to empty the bath on their own without waiting for the end of the count.



- 3. When the bath is used during a power outage, it is recommended, once the power is restored, to reset the counter batteries. \*
- \* See battery replacement sheet.

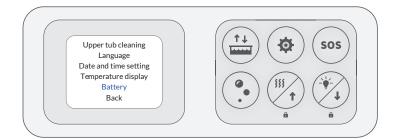

 If power is not restored by the end of the 90 second countdown, the chromatherapy lights will remain accessible for approximately 10 minutes (depending on the battery condition) to allow the user to dry off and find light.

